
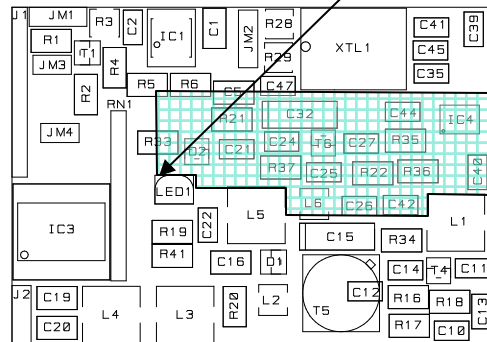


RF Deck shield

Fabricate from thin tin, 0.010", Altoids cans work well for this.

Solder shield to L1, L5, and ground pin on XTL1. Make sure shield does not touch other pins, components or traces.

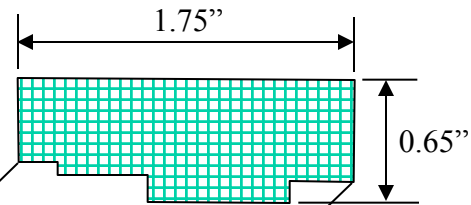

This shield drawing is to scale. The best way to build this shield is to past this drawing to a sheet of thin tin and cut it out using heavy duty scissors.